User manual

Electronic compact heat meter 230-mmx

mix systems

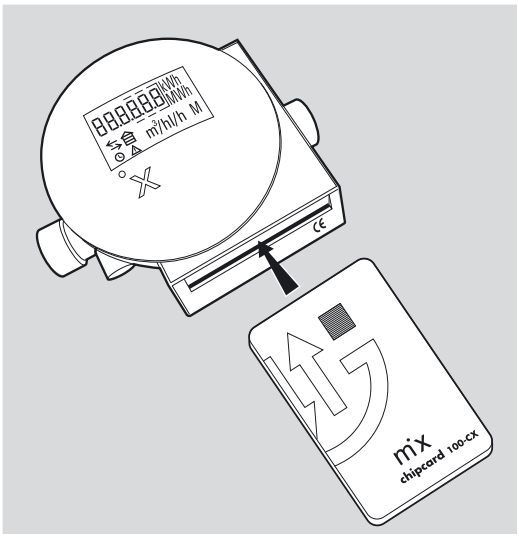

Application flow

After passing the accounting date you will be served with a SmartCard.

1. Insert SmartCard in sequence into all devices until display reading of the last unit shows „END“ .
2. Send SmartCard back to heat billing company.

Correct insertion of SmartCard

The SmartCard must be inserted completely to the end of the SmartSlot of the devise as illustrated in picture.

Display reading

Once the mx SmartCard is inserted correctly, a „roaming“ capital O is displayed.

① Once the readout process is successfully completed, the LC display will show e.g. „O1oFO5“

This means that the 1. device of total 5 units was read successfully.

Repeat this procedure until all other devices are read successfully.

② When all devices have been read, END is displayed. The readout is completed. You can send now the SmartCard directly to your billing company.

What to do if Smartcard fails to read the device?

③ If one ore more devices fail to show any reading in display ore only the word „Card“ is shown on the LC display :

The communication with the SmartCard is not functioning.

Pull the SmartCard out of slot and retry again. Should the readout still fail, than please write down the following values:

- Actual energy count (if available)
- Serial number (frontal, right). Send this notes together with the SmartCard to your billing Company

④ The LC display shows „Add“ on unit. They metered device does not belong to your billing unit. Go on to read out the remainder of your heat meters. The additional device is automatically removed from your billing account.

Normal display

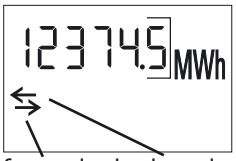

mx systems ag
mail: info@mx-systems.ch
web: www.mx-systems.ch